

PARTS LIST FOR AC-33150L	
NO	parts
1	screw
2	Shell bottom cover
3	Cover screw
4	Upper cover of the casing
5	Guide plate screw
6	Guide plate fixing rod
7	Sprocket
8	Guide plate
9	chain
10	Guide plate
11	Cover plate
12	Cover plate nut
13	Control switch
14	battery
15	Gear spindle
16	Reduction gear
17	screw
18	screw
19	bearing
20	Circlip
21	Motor frame
22	bearing
23	Motor gear
24	electrical machinery
25	Sharger
26	BMC

