

PARTS LIST FOR AC-6232L

NO	parts
1	left case
2	M4*10 Screws
3	M8 nut
4	spline stop
5	X25 aluminum parts
6	upper blade
7	M5*14 screws
8	lower blade
9	Pendulum gear
10	Oscillating tool shaft
11	right case
12	trigger Switch
13	Reduction gearbox
14	output travel rack
15	stroke gear
16	support
17	stroke gear
18	switch sticker
19	motor
20	small gear
21	699 bearing
22	inner circlip
23	screw
24	magnet
25	circuit board
26	M3*22 screws
27	small cover
28	M2"10 screws
29	screws
30	Battry
31	Sharger
32	BMC

