 


NO.	DESCRIPTION	PHOTO
1	Spindle	
2	Bear 69000	
3	Planetary teeth	
4	C-type spring	
5	Bear 0808	
6		
7	Motor teeth	
8	Motor	
9	Control Board	
10	Switch	
11	Battery Pin	
12	spring screw	
13	Screw M4*25	
14	Iron sleeve	
15	Spring	
16	shaft spring	
17	Chain protect cover	
18	Left shell	
19	Right shell	
20	Chain plate cover	
21	Chain wheel	
22	Hexagon flange nut	

SPARE PARTS LIST OF AC-33100L

