
AC-2326T

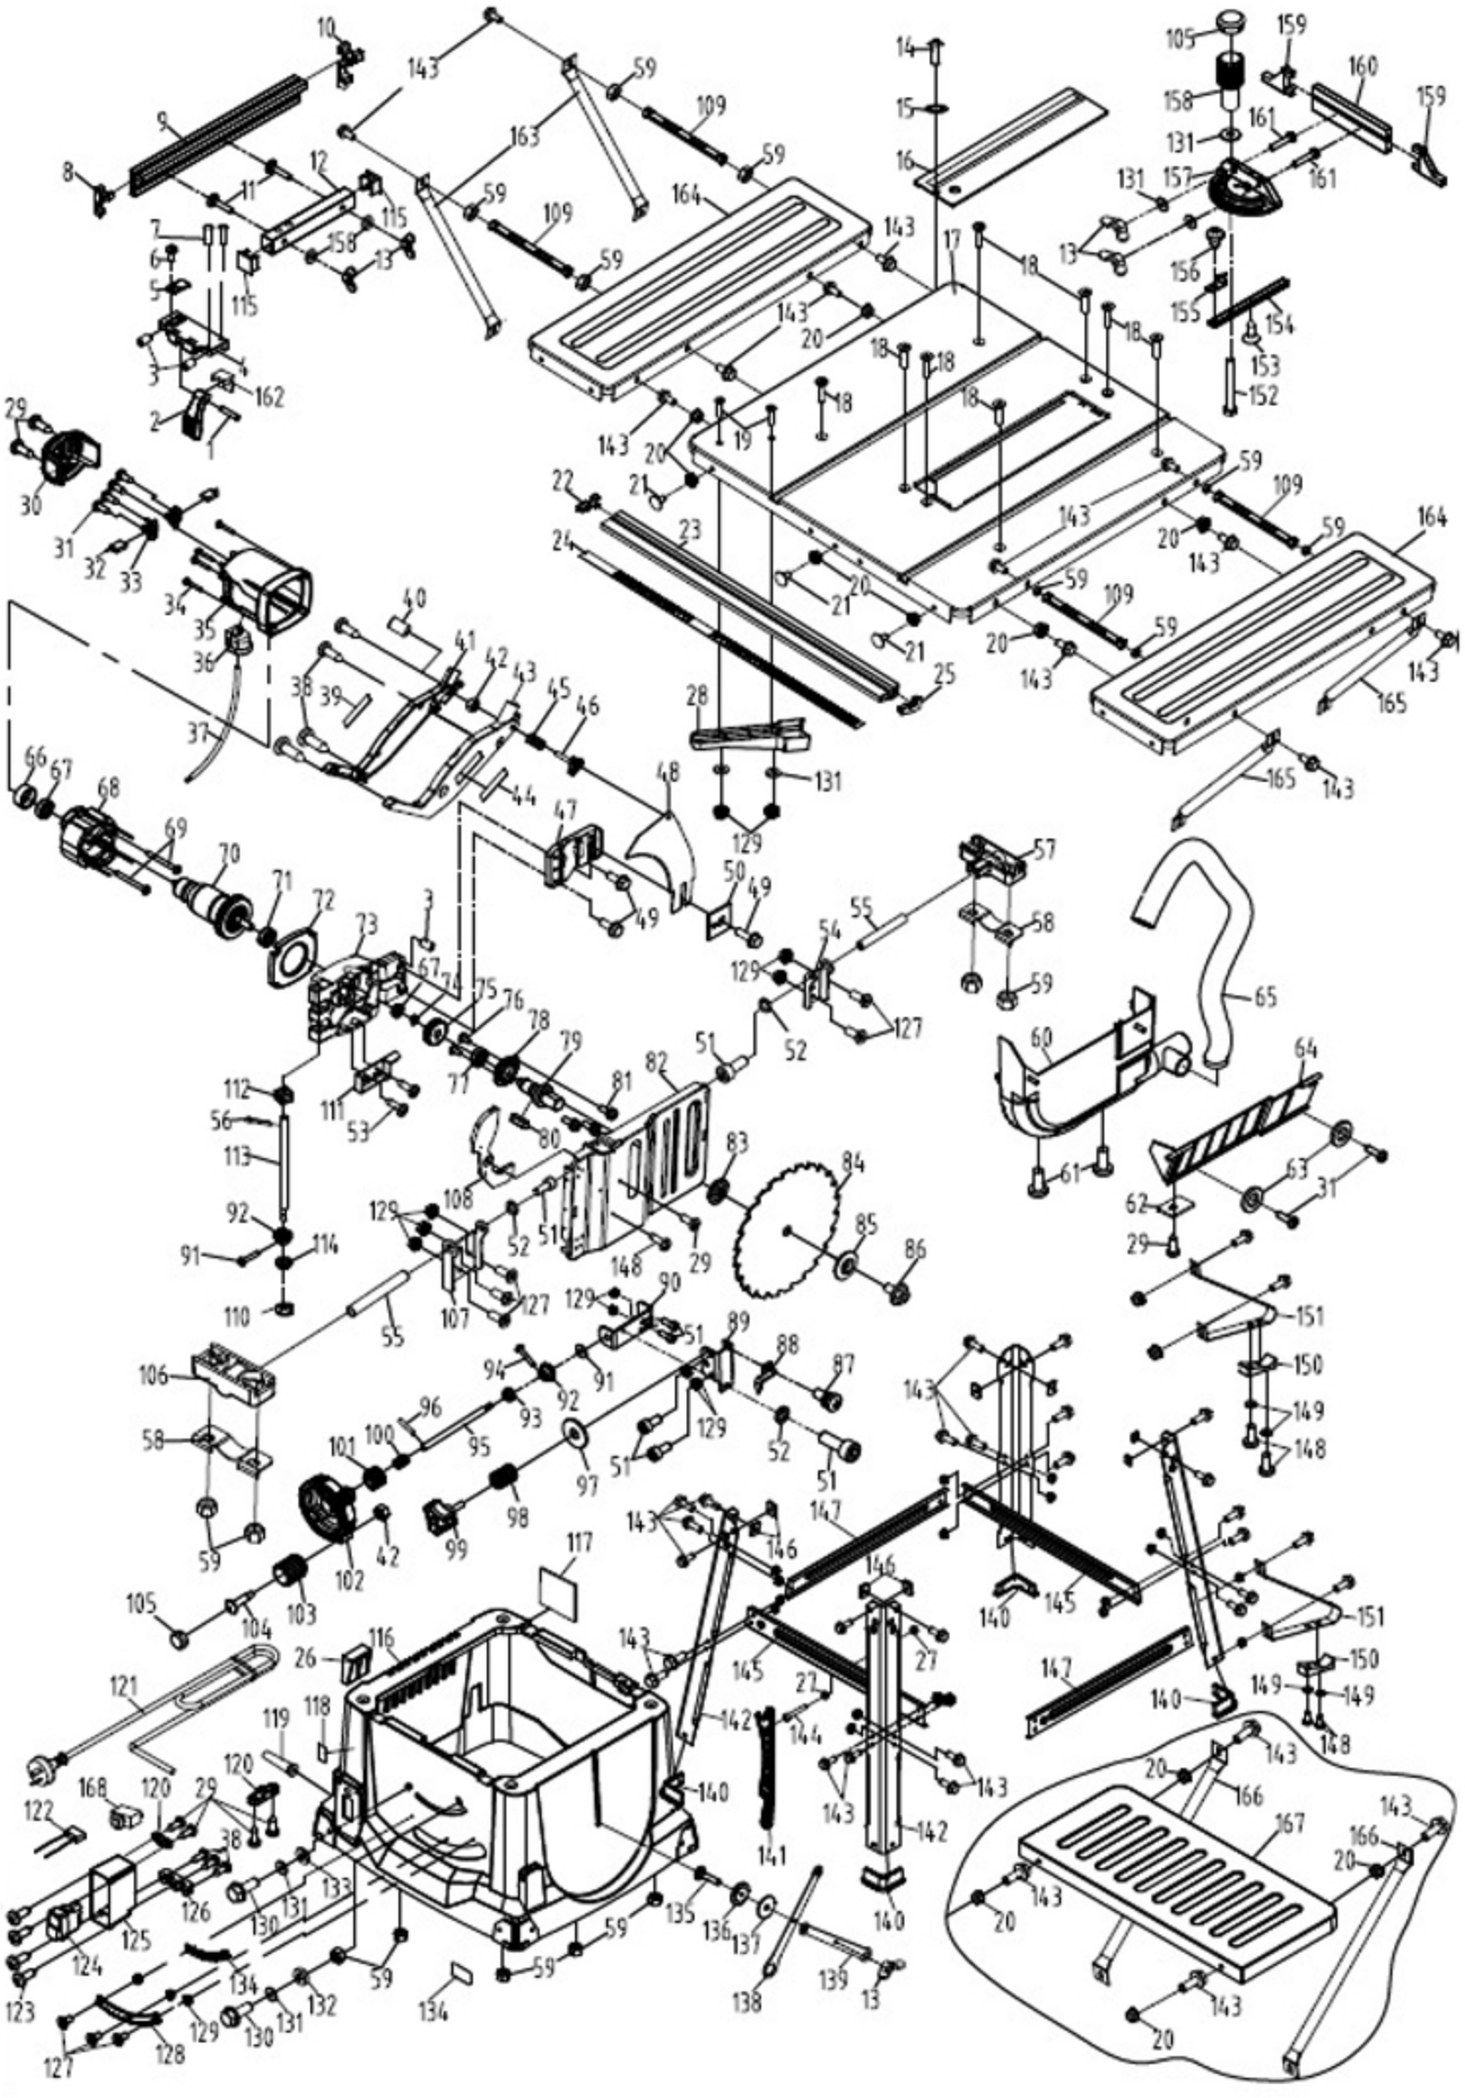

	Description			Description	
1	Pin	S20C	91	Washer	Ø22XØ10X2
2	eccentric lever	PA6	92	Bevel gear	PA6-GF30
3	Set screws	M6X10	93	Bushing - driving rod	PA6-GF30
4	parallel stop	ADC12	94	self tapping screws	ST4.2X22
5	Rip fence indicator	PC	95	actuating arm	S20C
6	Cross head screws	M4X5	96	Spring pin	Ø3X20
7	Screws	M6X13	97	Washer	Ø25XØ6.5X2
8	End cap	PP	98	Spring	65Mn
9	Stop rail	6063-T5	99	Bevle lock knob	PA6+S20C
10	End cap	PP	100	Spring	65Mn
11	Carriage bolt	M6X45	101	bevel gear wheel	PA66-GF40
12	parallel stop	6063-T5	102	Bevel crank wheel	PP
13	wing nut	M6	103	Knob	PA6
14	Cross head screws	M4X10	104	Screws	M6
15	nut	Φ4	105	End cap	PA6
16	Teble insert	ABS	106	Front Bevel sharft support	PA6
17	Teble	Q235	107	Front mount plate	Q235
18	Screw	M6X25	108	Blede guard	PC
19	Screw	M5X20	109	extension table support rod	PP
20	Hex nut	M6	110	Lock nut	M8
21	Carriage bolt	M6X12	111	Lower blade guard	PC
22	Left End cap	PP	112	Double nut	ADC12
23	Left guide rail	6063-T5	113	Threaded rod	S20C
24	Left Scale	PVC	114	Washer	PA6
25	Right End cap	PP	115	End cap	PP
26	Push sticker holder	PA6	116	Main casing	PP
27	Hex nut	M5	117	Data label	PVC
28	Teble support block	PP	118	Safe wering label	PVC
29	self tapping screws	ST4.2X13	119	Cord Protector	PVC
30	motor end cap	PA6-GF30	120	Cable clamp	PA6
31	self tapping screws	ST4..0X9.5	121	Power cord	
32	Carbor brush		122	Capacitor	
33	brush holder		123	self tapping screws	ST4.2X16
34	Cross head screws	M5X35	124	Switch	
35	Motor house	PA6-GF30	125	Switch box	ABS
36	Strain relief	6P3-4	126	Switch box cover	PA6
37	motor connect line		127	Screws	M5X12
38	self tapping screws	ST4.2X16	128	Gear rack	PA6
39	Left label	PVC	129	Hex nut	M5
40	Set screws	M6X6	130	Hex screws	M6X16
41	Left blade guard	PC	131	Washer	Ø6XΦ17X1.2
42	Lock nut	M6	132	45° Bush	PA6
43	Right blade guard	PC	133	90° Bush	Q235
44	Right label	PVC	134	Logo	PVC
45	Spring	65Mn	135	Carriage bolt	M6X25
46	Knob	M6X25	136	Threaded spacer	PA6
47	Riving knife bracket	ADC12	137	Washer	Ø35XØ6.5X2
48	Riving knife	S50C	138	Blade Spanner A	
49	Hex screws	M6X25	139	Blade Spanner B	
50	Riving knife clamp	ADC12	140	Rubber foot	NBR
51	Socket screws	M5X12	141	Pusch sticker	ABS
52	Spring washer	Φ5	142	Leg A	Q235
53	Screws	M4X12	143	Hex screws	M6X12
54	Rear mount plate	Q235	144	Socket screws	M5X20
55	Pin	S20C	145	Beam B	Q235
56	C-ring	Φ10	146	Square nut	M6
57	Rear Bevel sharft support	PP	147	Beam C	Q235
58	Locking plate	Q235	148	Cross head screws	M4X8
59	Hex nut	M6	149	Washer	Φ4x10
60	Dust cover	PC	150	Stability Support foot	NBR
61	Cross head screws	M6X16	151	Stability Support	Q235
62	Plate	Q235	152	Hex bolt	M6X35
63	Washer	Φ5XΦ17	153	self tapping screws	ST5X18
64	Blade gurad plate	PC	154	Rod - miter gauge	ABS
65	Extraction hose	PE	155	Miter gauge indicator	Q235
66	bearing sleeve	NBR	156	self tapping screws	ST4.8X10
67	Bearing	608	157	Miter gauge	ABS
68	Motor housing field assembly		158	Knob	PA6
69	self tapping screws	ST4.8X55	159	End cap	PP
70	Armature assembly		160	Miter gauge stop rail	6063-T5
71	Bearing	6201	161	Carriage bolt	M6X25
72	baffle	PA6-GF30	162	Lo ck plate	PA66
73	Gear housing	ADC12	163	Left table support bar	Q235
74	C-ring	Ø14	164	Left extension table	Q235
75	Gear	40Cr	165	Right Table support bar	Q235
76	Screw	M5X10	166	Rear Table support bar	Q235
77	Bearing	6002	167	Rear extension table	Q235
78	Bearing cover plate	ADC12	168	Over-load switch	
79	Arbor	S45C	169		
80	Flat key	4X4X12	170		
81	Cross head assembly	M4X12	171		
82	Motor bracket	Q235	172		
83	Inner blade flange	S20C	173		
84	Blade		174		
85	Outter blade flange	Fc0205	175		
86	Hex bolt	M8X16	176		
87	Cross head assembly	M5X12	177		
88	bevel indicator	PC	178		
89	mount plate	Q235	179		
90	Bracket - driving rod	Q235	180		