
AC-62125

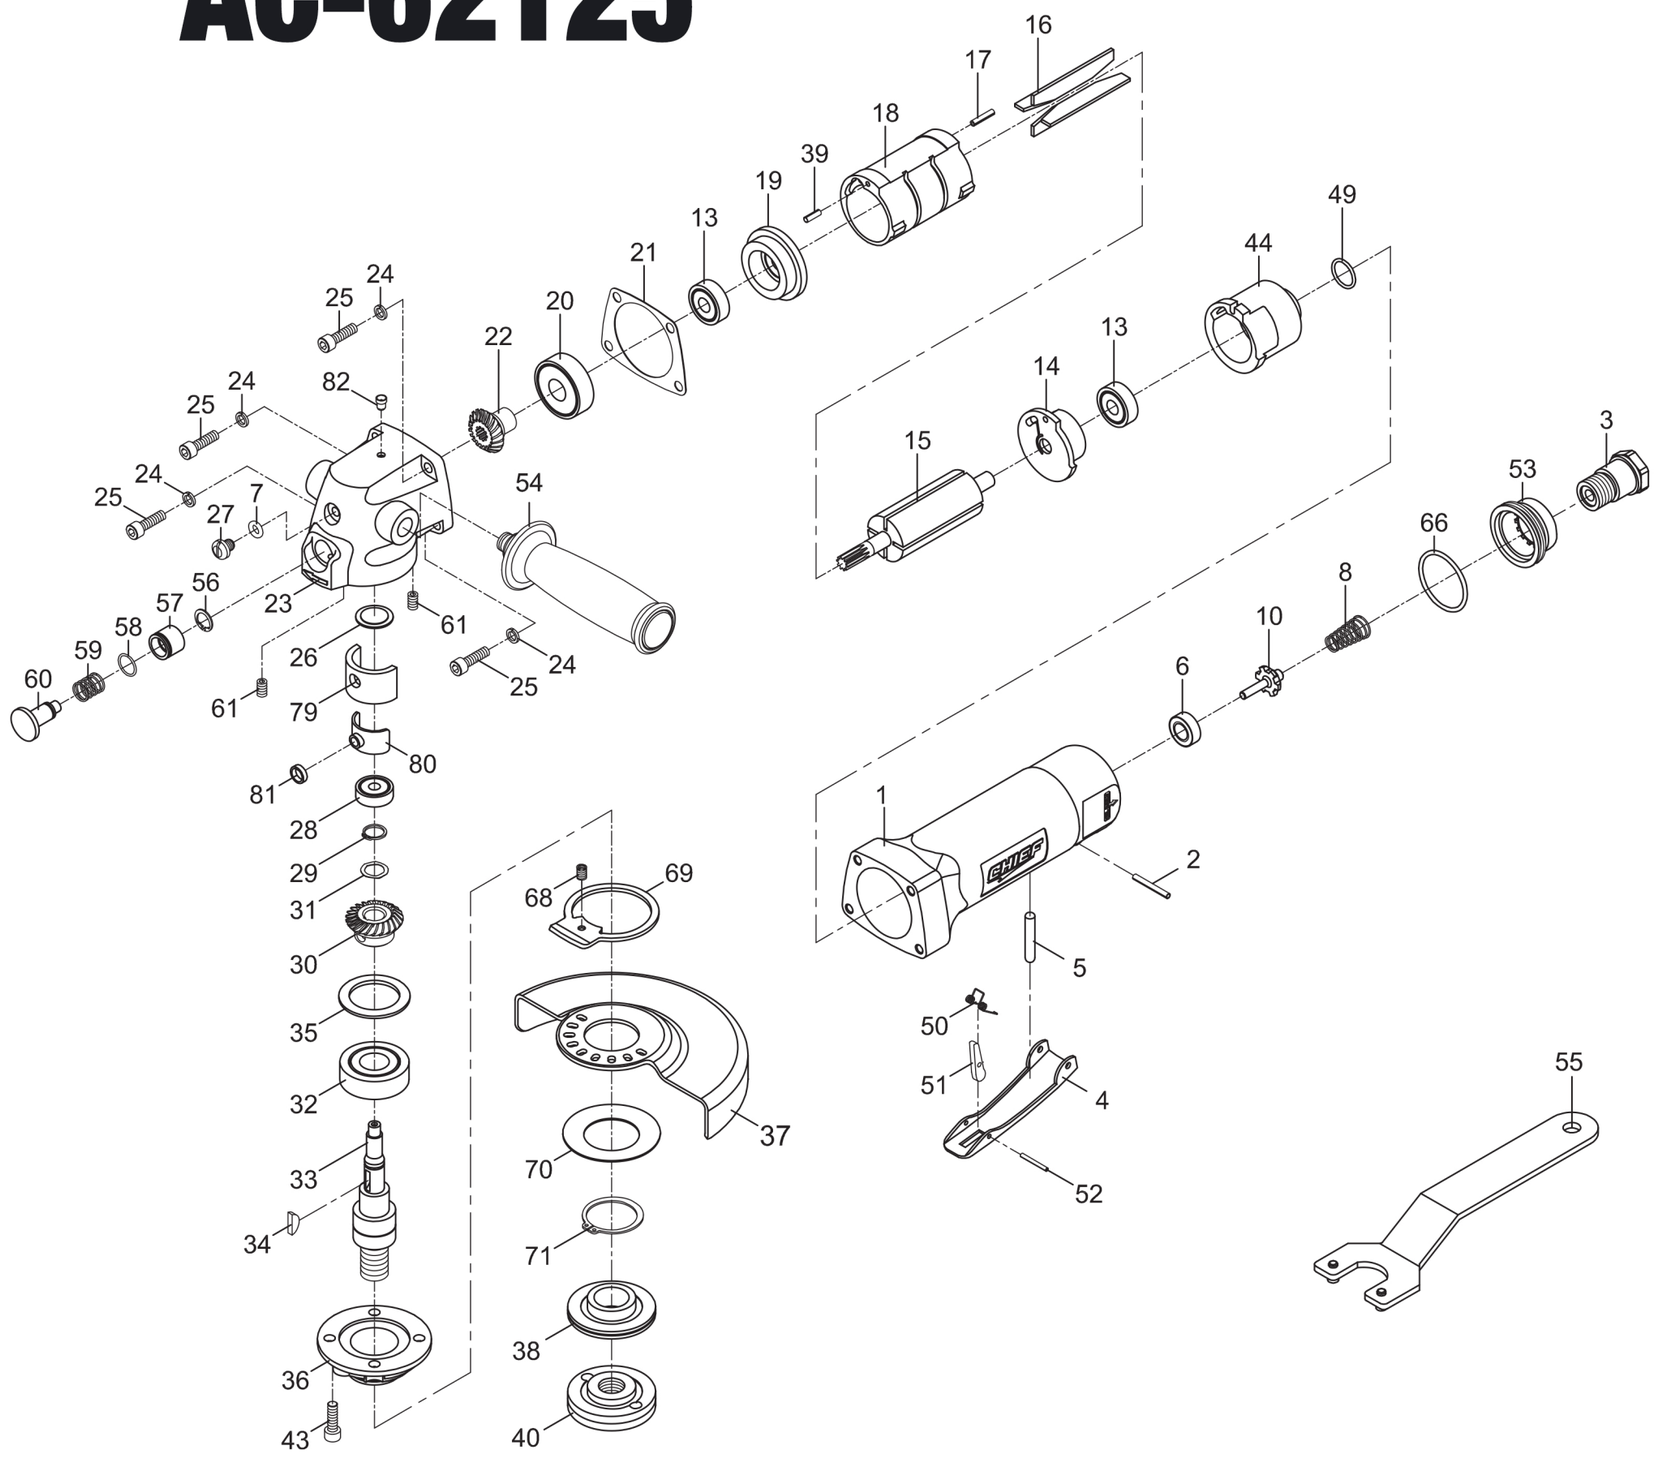

parts List	
NO	Description
1	Motor Housing
2	Spring Pin
3	Air Inlet
4	Trigger
5	Pin
6	Rubber Spacer
7	O-Ring
8	Spring
10	Valve Stem
13	Ball Bearing
14	Rear Plate
15	Rotor
16	Rotor Blade
17	Spring Pin
18	Cylinder
19	Front End Plate
20	Ball Bearing
21	Gasket
22	Bevel Gear
23	Gear Housing
24	Spring Washer
25	Screw
26	Spacer
27	Screw
28	Ball Bearing
29	Retaining Ring
30	Bevel Gear
31	Wave Washer
32	Ball Bearing
33	Spindle
34	Key

parts List	
NO	Description
35	Spacer
36	Bearing Cap
37	Wheel Guard
38	Flange
39	Spring Pin
40	Flange Nut
43	Screw
44	Inlet Guide
49	O-Ring
50	Spring
51	Safety Bar
52	Spring Pin
53	Exhaust Diffuser
54	Auxiliary Handle
55	Pin Wrench
56	Retaining Ring
57	Bushing
58	O-Ring
59	Spring
60	Spindle Lock Butto:
61	Set Screw
66	O-Ring
68	Spring
69	Lock Ring
70	Disk Spring
71	Retaining Ring
79	Oiler
80	Support Piece
81	Washer
82	Oil Cap