
# 10. ASSEMBLY DIAGRAM AND PARTS LIST

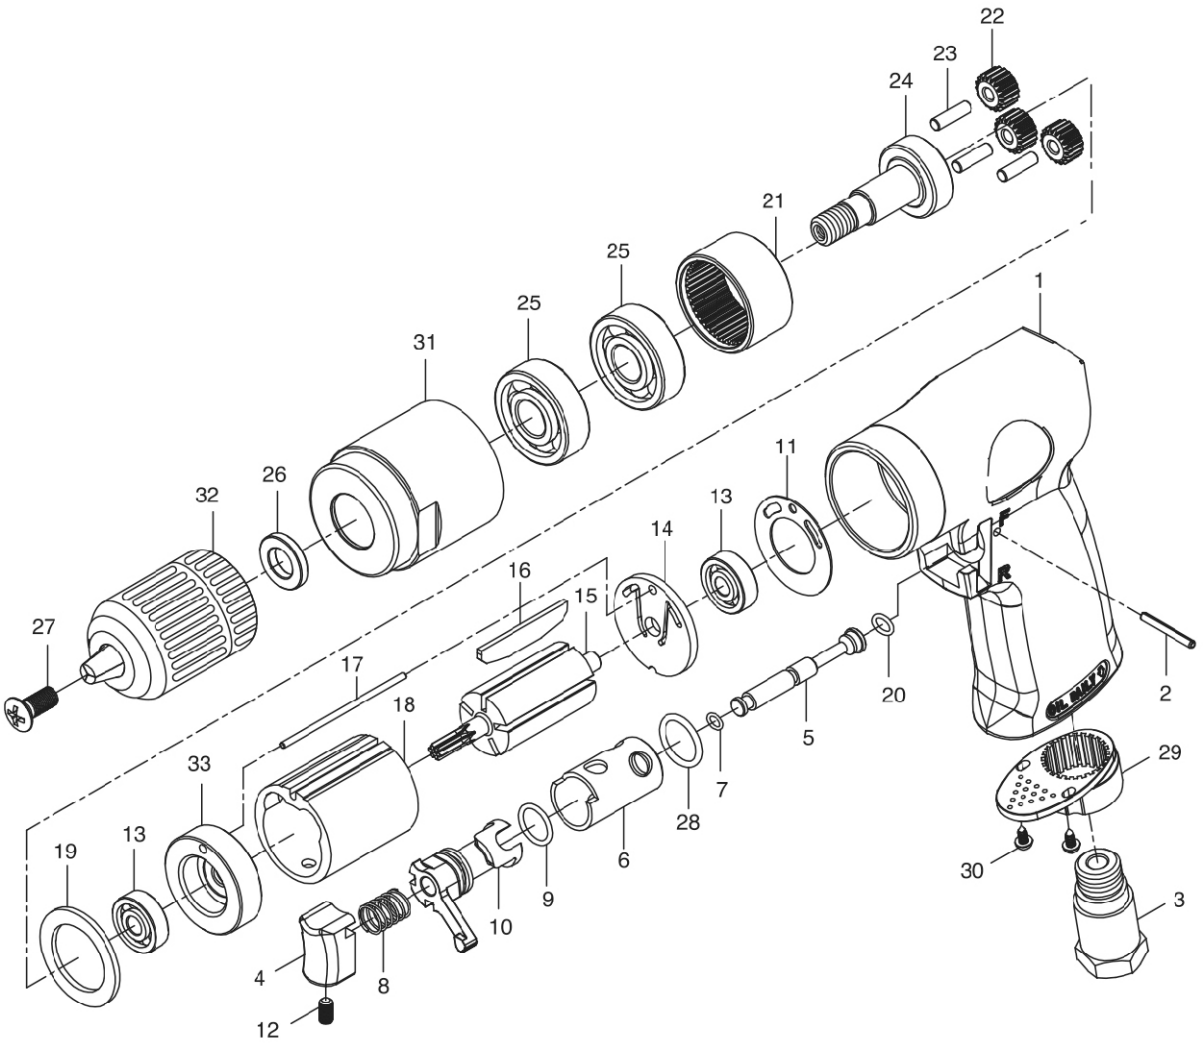


| No. | Description | Qty. | No. | Description | Qty. |
|---|---|---|---|---|---|
| 1 | Housing | 1 | 18 | Cylinder | 1 |
| 2 | Trigger Pin | 1 | 19 | V-Gasket | 1 |
| 3 | Air Inlet | 1 | 20 | O-Ring | 1 |
| 4 | Trigger | 1 | 21 | Gear Ring | 1 |
| 5 | Switch Pin | 1 | 22 | Gear | 3 |
| 6 | Bushing | 1 | 23 | Gear Pin | 3 |
| 7 | O-Ring | 1 | 24 | Spindle | 1 |
| 8 | Spring | 1 | 25 | Bearing | 2 |
| 9 | O-Ring | 1 | 26 | Bushing | 1 |
| 10 | Direction Lever | 1 | 27 | Chuck Screw | 1 |
| 11 | Seal Gasket | 1 | 28 | O-Ring | 1 |
| 12 | Trigger Nut | 1 | 29 | Exhaust Diffuser | 1 |
| 13 | Rear Bearing | 2 | 30 | Screw | 2 |
| 14 | Rear Cover | 1 | 31 | Clamp Nut | 1 |
| 15 | Rotor | 1 | 32 | Chuck | 1 |
| 16 | Rotor Blade | 5 | 33 | Front Cover | 1 |
| 17 | Fixed Pin | 1 | | | |